



# **HikCentral Professional Mobile Client**

**Feature List**

## Legal Information

©2020 Hangzhou Hikvision Digital Technology Co., Ltd. All rights reserved.

### About this Manual

The Manual includes instructions for using and managing the Product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version of this Manual at the Hikvision website ( <https://www.hikvision.com/> ).

Please use this Manual with the guidance and assistance of professionals trained in supporting the Product.

### Trademarks

**HIKVISION** and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions.

Other trademarks and logos mentioned are the properties of their respective owners.

### Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS MANUAL AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED “AS IS” AND “WITH ALL FAULTS AND ERRORS”. HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. THE USE OF THE PRODUCT BY YOU IS AT YOUR OWN RISK. IN NO EVENT WILL HIKVISION BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY, OR OTHERWISE, IN CONNECTION WITH THE USE OF THE PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.

YOU ACKNOWLEDGE THAT THE NATURE OF INTERNET PROVIDES FOR INHERENT SECURITY RISKS, AND HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER-ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

YOU AGREE TO USE THIS PRODUCT IN COMPLIANCE WITH ALL APPLICABLE LAWS, AND YOU ARE SOLELY RESPONSIBLE FOR ENSURING THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. ESPECIALLY, YOU ARE RESPONSIBLE, FOR USING THIS PRODUCT IN A MANNER THAT DOES NOT INFRINGE ON THE RIGHTS OF THIRD PARTIES, INCLUDING WITHOUT LIMITATION, RIGHTS OF PUBLICITY, INTELLECTUAL PROPERTY RIGHTS, OR DATA PROTECTION AND OTHER PRIVACY RIGHTS. YOU SHALL NOT USE THIS PRODUCT FOR ANY PROHIBITED END-USES, INCLUDING THE DEVELOPMENT OR PRODUCTION OF WEAPONS OF MASS DESTRUCTION, THE DEVELOPMENT OR

## HikCentral Professional Mobile Client Feature List

---

PRODUCTION OF CHEMICAL OR BIOLOGICAL WEAPONS, ANY ACTIVITIES IN THE CONTEXT RELATED TO ANY NUCLEAR EXPLOSIVE OR UNSAFE NUCLEAR FUEL-CYCLE, OR IN SUPPORT OF HUMAN RIGHTS ABUSES.

IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATER PREVAILS.

# Contents

<b>Overview .....</b>	<b>1</b>
<b>Features in the Resource Module .....</b>	<b>2</b>
Search Resource .....	2
Live View Related Features .....	2
Playback Related Features .....	6
Video Intercom Related Features .....	8
Third-party Integrated Device Features .....	9
Map Related Features .....	10
<b>Features in the View Module .....</b>	<b>12</b>
<b>Features in the Alarm Module .....</b>	<b>13</b>
<b>Features in the Search Module .....</b>	<b>15</b>
<b>Features in the Video Analysis Module .....</b>	<b>17</b>
<b>Features in Traffic Module .....</b>	<b>18</b>
<b>Features in Person Module .....</b>	<b>19</b>
<b>Features in Health Monitoring Module .....</b>	<b>20</b>
<b>Features in the Local Configuration Module .....</b>	<b>22</b>

## Overview

HikCentral Professional Mobile Client provides access to the HikCentral Professional platform via Wi-Fi, 3G, and 4G networks, allowing you to remotely control and manage devices connected to the platform with operations such as live view, remote playback, PTZ control, video clipping, and alarm notification.

---

 **Note**

Network traffic charges may be produced during the use of this Mobile Client. Please refer to the local ISP.

---

## Features in the Resource Module

### Search Resource

Feature	Description
Search Resource	Search resources by keywords.
Filter Resources by Area	Search for the resources in a specific area.
Filter Resources By Site	Search for the resources added to a specific site.
Filter Resources by Resource Type	Filter resources by resource types, including all, camera, door, elevator, radar, or third-party integrated resource, etc.

### Live View Related Features

Feature	Description
Set Window Division	Set the window division mode to 1-window mode or multiple-window mode. On the phone, you can set 4 window divisions for live view at most. On the tablet, you can set 9 window divisions for live view at most.
Single-channel Live View	View the live video streamed from a single channel in 1-window mode. In multiple-window mode, you can drag a live view window upwards to the appearing trash-can icon to delete the window.
Multiple-channel Live View	View the live video streamed from multiple channels simultaneously in multiple-window mode.
Drag to Delete a Specific Channel	During multiple-channel live view, you can select a channel and then drag the channel towards the trash-can icon appeared at the upside to delete it.
Add More Channel for Live View	Add more channels during live view to view the live videos of the newly-added channels and the existing channels simultaneously.
Switch Cameras During Live View	Switch cameras if the door, radar or elevator controller links cameras.


## HikCentral Professional Mobile Client Feature List

---

Feature	Description
	<p>Up to 2 cameras can be linked to door.</p> <p>Up to 2 cameras can be linked to elevator controller.</p> <p>Up to 4 cameras can be linked to radar.</p>
Switch to Playback	Switch from live view to playback.
Switch Page of Live View Window	<p>On the phone, up to 4 live view windows can be displayed on one page. Swipe to the right/left to switch pages if more than 4 channels are selected.</p> <p>On the tablet, up to 9 live view windows can be displayed on one page. Swipe to the right/left to switch pages if more than 9 channels are selected.</p>
Adjust Window Sequence	Drag to adjust window sequence in multi-window mode.
PTZ Control	Perform PTZ control for cameras with pan/tilt/zoom functionality, and set preset, patrol, pattern, as well as 3D positioning for cameras in PTZ control mode.
Manual Recording and Capture	Record (clip) video files and capture pictures manually during live view.
Subscribe Events	Subscribe events of doors (by event type) and face comparison events.
Preview Captured Picture and Recorded Video Footage	Tap the pop-up thumbnail after capture or recording to preview the captured picture and recorded video footage.
Save Captured Picture or Recorded Video Footage	Tap the pop-up thumbnail after capture or recording and then tap <b>Save</b> to save the captured picture or recorded video footage to the photo album of the tablet.
Share Captured Picture or Recorded Video Footage by Email	Tap the pop-up thumbnail after capture or recording and then tap <b>Email</b> to send the captured picture or recorded video footage to others by email.
Fisheye Dewarping	<p>Play the live video of the fisheye camera in fisheye dewarping mode. Dewarping refers to the process of perspective correction of an image, to reverse the effects of geometric distortions caused by the fisheye camera lens. Dewarping allows the user to cover a wide area with a single device, but also to have a "normal" view of an otherwise distorted or reversed image. A dewarped fisheye device will function as regular PTZ device, and can be controlled by clicking and dragging the mouse inside the dewarped image.</p>

## HikCentral Professional Mobile Client Feature List


---

Feature	Description
View ANPR Camera's Live Video	View ANPR camera's live video. The license plates of the passing vehicles (including motorcycles) in the field of views of the ANPR cameras will be recognized and displayed on the left side of the live view window (when in landscape mode) or on the lower side of the live view window (when in portait mode).
Control Door in Live View	<p>Control the door status and view the card swiping record in real time when viewing the live video of the door's related cameras. If the door is a turnstile, you can select entrance control or exit control.</p> <p> <b>Note</b></p> <p>The followings are the descriptions of the door status.</p> <p><b>Closed, Unlocked</b></p> <p>The door magnetic contact is closed, but the door lock is unlocked. In this status, the visitor can open the door without credentials (card, fingerprint, or PIN). When the door is opened, the door status will change to <b>Open, Unlocked</b>. And after the door being opened, the door will close automatically in a few seconds.</p> <p><b>Open, Locked</b></p> <p>The door magnetic contact is open, and the door lock is locked, so that the door will remain open. You may need to set the door status to <b>Open, Locked</b> so that the door will remain open and won't close automatically in some special occasions, such as the occasion in which you need to carry furniture through the door.</p> <p><b>Open, Unlocked</b></p> <p>The door magnetic contact is open, and door lock is unlocked. In this status, visitors can go through the door directly. After the door closes automatically, the door status will change to <b>Closed, Unlocked</b>.</p> <p><b>Closed, Locked</b></p> <p>The door magnetic contact is closed, and the door lock is locked, so that the door will remain closed. In this status, the visitors can't open the door by any form of credentials (card, fingerprint, or PIN).</p>
View Live Video of Radar's Related Camera	View the live video of the radar's related camera.




## HikCentral Professional Mobile Client Feature List

---



Feature	Description
Arm/Disarm Radar	Arm/disarm the radar during the live view of the radar's related camera.
Arm Radar Mandatorily	Arm the radar mandatorily after radar arming failure.
View Live Video of Elevator Controller' Related Camera	View the live video of the elevator controller's related camera.
Set Access Level for Floor	During live view of elevator controller's related camera, you can set the access level (temporary access, access with credential, free access, or access forbidden) for each floor linked to the access control device.
View Detected Face in Live View	Check detected face pictures and the matched face pictures when viewing the live video of the cameras which support face recognition.
Add Vehicle to Vehicle List	Add the recognized vehicle to the vehicle list when viewing the live video of ANPR cameras or Under Surveillance Systems.
View Detected Events in Live View	View the detected events, including ANPR events, face comparison events and access events of doors and elevator controllers can be displayed on Message panel in real-time during live view
Search Person	<p>Search person information (search captured face picture, search records in archives, and search person's identity) after you manually capture a face picture during live view, or when a face or a face comparison event is detected.</p> <p> <b>Note</b> For details about searching persons, see <b><i>Features in the Search Module</i></b> .</p>
Search Access Record	Search access records when an access event is detected.
Search Passing Vehicle	Search passing vehicles when an ANPR event (the license plate number of a vehicle is detected) occurs.
Add Person to Person List	Add the detected person (who is not matched with any person in the face comparison group) to the person list during live view, and then add the person to face comparison group(s) and set effective period.
Trigger User-Defined Event	Trigger user-defined events manually and then a series of actions will be triggered based on the settings on the Web Client.

## HikCentral Professional Mobile Client Feature List

---

Feature	Description
Add Resources to Favorites	Add resources to favorites during live view.
Remove Resource from Favorites	Remove the resource(s) from Favorites.
Audio Control	Turn on or turn off audio of the selected channel.
Two-way Audio	Perform two-way audio via NVR or channel during live view.
Digital Zoom	Spread two fingers apart to zoom in or pinch them together to zoom out the live view image.
Switch Stream Type	<p>Set the stream type of a channel to main stream, sub-stream, or smooth stream during live view.</p> <p> <b>Note</b> The available stream types vary with different cameras.</p>
Locate on Map	Locate the logical resource on map.

### Playback Related Features

Feature	Description
Playback (Single Camera)	<p>View the video footage of a single camera.</p> <p> <b>Note</b> DST (Daylight Saving Time) is supported if video footage is played back by device time.</p>
Playback (Multiple Cameras)	<p>View the video footage of multiple cameras.</p> <p>In multi-window mode, you can drag the window upwards to the appearing trash-can icon to delete the window.</p> <p> <b>Note</b> DST (Daylight Saving Time) is supported if video footage is played back by device time.</p>
Switch to Live View	Switch to live view during playback.
Switch Resources to View Video Footage	Up to 4 windows can be displayed on one page. Swipe to the left or right to switch pages if more than 4 resources are under playback.



## HikCentral Professional Mobile Client Feature List

---

Feature	Description
Add Tag	Add tags to specific video footage which contains important information.
Delete Tag	Delete the added tags.
Edit Tag	Edit the tag name and the tag description.
View Tag Details	View the tag details, including tag name, tag description, etc.
Locate the Tagged Part	Switch to the first frame of the video's tagged part to start playback.
Trigger User-Defined Event	Trigger user-defined events manually and then a series of actions will be triggered based on the settings on the Web Client.
Synchronous Playback	Play video files of multiple channels simultaneously in terms of the recorded time. When you drag the time bar, change the playback speed, or pause playback, all channels will follow.
Adjust Playback Speed	Adjust playback speed to 1/4X, 1/2X, 1X, 2X, and 4X.
Switch Storage Location	Select video footage in main storage, auxiliary storage, or central storage for playback.
Switch Stream Type	Set the stream type of a channel to main stream or sub-stream during playback.
Clip Video and Capture	Clip video footage and capture pictures during playback.
Preview Captured Picture and Clipped Video Footage	Tap the pop-up thumbnail after capture or clipping to preview the captured picture and clipped video footage.
Save Captured Picture or Clipped Video Footage	Tap the pop-up thumbnail after capture or clipping and then tap <b>Save</b> to save the captured picture or clipped video footage to the photo album of the tablet.
Share Captured Picture or Clipped Video Footage by Email	Tap the pop-up thumbnail after capture or clipping and then tap <b>Email</b> to send the captured picture or clipped video footage to others by email.
Enable PIP Mode	Enable PIP (Picture in Picture) mode, to display the live view window as an inset floating over the playback window so as to view the video footage and live view of the logical resource simultaneously.
Transcoding Playback	Adjust the frame rate, bitrate and image resolution during playback according to the bandwidth conditions. For example, in low bandwidth conditions, you can lower the bitrate or frame

## HikCentral Professional Mobile Client Feature List

---


Feature	Description
	<p>rate of the streams, or lower the image resolution to ensure video quality.</p> <p> <b>Note</b> Transcoding playback should be supported by the device.</p>
Restricted Playback	<p>Play back recent video for a restricted time period.</p> <p> <b>Note</b> This function is defined by the role permission, which is set on the Web Client.</p>
Digital Zoom	Spread two fingers apart to zoom in or pinch them together to zoom out the playback image.
Fisheye Playback	Play the recorded video of the fisheye camera in fisheye dewarping mode. Dewarping refers to the process of perspective correction of an image, to reverse the effects of geometric distortions caused by the fisheye camera lens. Dewarping allows the user to cover a wide area with a single device, but also to have a "normal" view of an otherwise distorted or reversed image. A dewarped fisheye device will function as regular PTZ device, and can be controlled by clicking and dragging the mouse inside the dewarped image.
Audio Control	Turn on or turn off audio of the selected channel.
Add Resource to Favorites	Add resource to Favorites during playback.
Remove Resource to Favorites	Remove resource from Favorites during playback.
Locate on Map	Locate the logical resource on map.

### Video Intercom Related Features

Feature	Description
Display a Call	Display an incoming call from a door station with related live video (if camera is linked to video intercom device).
Display Multiple Calls	Display multiple incoming calls from door stations with related live videos (if cameras are linked to video intercom devices).
Switch Calls to Answer	Swipe to switch calls to answer if there are more than 3 incoming calls simultaneously.

## HikCentral Professional Mobile Client Feature List

---


Feature	Description
Answer a Call	<p>Answer an incoming call.</p> <p> <b>Note</b></p> <ul style="list-style-type: none"> <li>• You can answer a call on the door station or on the indoor station.</li> <li>• For iOS, if you exit the Mobile Client when answering a call, the call will be ended automatically.</li> <li>• For Android OS, if you exit the Mobile Client when answering a call, only the two-way audio will be ended. After that, if you re-enter the Mobile Client, the video intercom page will be resumed and you can still view the live video and control the door.</li> </ul>
View Live Videos	View live video(s) streamed from the camera(s) linked to the door(s) when receiving call(s) and answering call(s).
Receive Card-swiping Events	Receive card-swiping events in real time when viewing the live video streamed from the camera linked to the door station.
Close the Calling Page	Click the Close button on the calling page to close the page. After you close the calling page, the call can still be received by other users using the Mobile Client or other programs.
Decline a Call	Decline a call if required. After that, the call is ended and it cannot be received by other users using the Mobile Client or other programs.
Open/Close Door	Open/Close the door linked to the door station if required after answering the call.
Control Two-Way Audio	Enable/Disable two-way audio during video call(s).
Switch Doors	During the call, switch doors for live view if two doors are linked to the door station.

### Third-party Integrated Device Features

Feature	Description
Operate Third-party Integrated Device	Operate the third-party integrated device (currently only third-party access control device) based on the device capability set obtains by the system.

## HikCentral Professional Mobile Client Feature List

---

Feature	Description
	 <b>Note</b> Live view and playback is not supported by third-party integrated device.
Display Third-party Integrated Device on Map	Display the third party integrated device (currently only third-party access control device) on map.

### Map Related Features


Feature	Description
Display Resource on Map	Display the added resources on the map, including camera, door linked to access control device, doors linked to door stations, elevator, third-party integrated device, etc.
Filter Resource Type	Filter the resource types to only display the selected resource type(s).
Locate Logical Resource	Show the locations of the logical resources on GIS map or e-map.
Zoom in/out	Zoom in or zoom out the map.
Add, Edit and Delete Label	Add and edit labels with descriptions to specific locations on map, or delete the labels.
Switch E-map	Switch between different e-maps.
Switch Map Mode	Switch between e-map and GIS map.
Live View	View the live video of a resource on map.
View History Alarm	View history alarms of resources on map and view the alarm related video footage (if exists).
Show Resources of a Site on Map	Show the resources of a HikCentral Site on the map of the Site.
Control the Door Linked to Access Control Device	Control status of the door linked to access control device on the map.
Control the Door Linked to Door Station	Open or close the door linked to door station, or keep the door remain opened.
Search and View Access Records	Search and view the access records of an access control devices or elevator controller on map.

## HikCentral Professional Mobile Client Feature List

---

<b>Feature</b>	<b>Description</b>
View Passing Vehicle Records	View passing vehicle records from ANPR cameras
View Moving Pattern Detected by Radar	View the moving pattern of the object detected by the radar.
Arm/Disarm Radar	Tap a radar on the map, and then arm/disarm the radar.
Switch Target Mandatorily for Radar	Switch target mandatorily for tracking when there are multiple targets detected within the radar's detection area.
Elevator Control	Set access level (temporary access, access with credential, free access, or access forbidden) for the floor linked to the elevator controller.
Alarm Input Control	View the arming or disarming status of alarm inputs on the map. Bypass the alarm input, and restore it.
Partition Control	Display the detection region of the partition on map. Display the status of the partition. Arm (stay arm, away arm, instant arm) and or disarm the partition. Clear alarms triggered by detectors linked to the partition.
Operate Third-Party Integrated Device	Operate third-party integrated device (based on the device capability set obtained by the system) on map.

## Features in the View Module

Feature	Description
Live View in View Mode	<p>View the live video of channels managed in a view, which is a window division with channels configured to each window.</p> <p> <b>Note</b></p> <p>The View mode enables you to save the window division and the correspondence between cameras and windows to quickly access the related cameras. For example, you can link camera 1, camera2, and camera3 located in your office to the display windows and save them a view called Office.</p>
Private View and Public View	<p>Private view is only accessible to its creator.</p> <p>Public view is accessible to all the users of your system.</p>
View Favorites	<p>View the resources in Favorites by resource type ().</p>
View Live View of Resources in Favorites	<p>Select one or more resources in Favorites to view their live videos.</p>



## Features in the Alarm Module

Feature	Description
Push Alarm Notifications	The Mobile Client will push near-real-time alarm notifications if you allow notifications from the Mobile Client in the OS of your phone or tablet, and enable notification in the local configuration module of the Mobile Client.
Refresh Alarm	Swipe upwards to load more alarms, and swipe downwards to get the latest alarms.
Filter Alarm	Set filter conditions to filter alarms.
View Alarm Related Picture	View the alarm related picture(s) displayed on the Alarm Details page.
Play Alarm Related Video	Play the alarm related video displayed on the Alarm Details page.
View Detailed Information of Visitor Card-Swiping Event	View the visitor information (e.g. name, passport No., telephone, passport picture, business affair), visatee information (e.g. name, ID No., telephone) , and visiting information (e.g. visiting time, visited door and card reader) displayed in the details page of visitor swiping card event.
View Instant Video (7s)	For Axiom Hub security control panel, you can view the alarm-related instant video (7s) on the alarm details page to determine if the alarm is a false alarm.
Receive Notifications about Calls from Door Stations	Receive notifications about calls from door stations and accept or decline the calls.
View Call Logs	View the logs of the calls from door stations on the alarm list page.
View Alarm Related Map Information	Tap the map icon on the Alarm Details page to view the alarm related map information.
Mark Alarm Information	Mark specific items of alarm information.
Acknowledge a Specific Alarm	Acknowledge a specific alarm if the related event is handled. Set alarm priority when acknowledging alarm. Set alarm category when acknowledging alarm.

## HikCentral Professional Mobile Client Feature List

---

Feature	Description
Batch Acknowledge Alarms	Batch acknowledge alarms if the related events have been handled.
Trigger User-Defined Event	Trigger user-defined events manually and then a series of actions will be triggered based on the settings on the Web Client.

## Features in the Search Module

Feature	Description
Search Tagged Video Footage	Search the tagged video footage by the configured conditions (including tag name, camera, tag type, storage mode, and time).
Search Matched Picture	<p>Search the face pictures matched with the pictures in the selected face comparison group(s) during the selected time periods.</p> <p>You can click the matched results to view the related video footage and related picture.</p>
Search Captured Picture	Search the face pictures of the persons in the selected person list captured by the selected camera(s) during the selected time period.
Search Frequently Appeared Person	<p>Select camera(s) and set time period for searching the frequently appeared persons.</p> <p>You can view the details of the search result including the captured time, related video footage, and related picture.</p>
Search Records in Archives	Search the records (captured pictures) in stranger libraries of the face recognition devices and the history face comparison records of the selected face comparison groups.
Search Identity Access	<p>Search for a specific person's identity by his/her face picture.</p> <p>You can set a similarity threshold and then search the selected face comparison group for the person's identity. You can also upload a target picture and then search the persons whose face similarities with the target picture are higher than the configured similarity threshold.</p>
Search Passing Vehicles	Search the information of the passing vehicles (including motorcycles), including owner name, recognized time, etc.
Search Access Records	<p>Search the access records of the elevators, doors linked to access control device, doors linked to door stations to view the event details, including the person picture, person name, ID, and time, etc</p> <p>You search access records by the name of a specific person, or by selected person list(s).</p>

## HikCentral Professional Mobile Client Feature List


---

Feature	Description
	You can also search persons by additional information such as gender, age, and hire date, etc, and then search the access records by the matched persons.
Visitor Record Search	<p>Search visitor records by conditions including registered time, visatee, purpose, visitor status (registered, checked-out, checked-out (auto), and self checked out), identification number, visitor name, phone number, and the company in which the visitor works.</p> <p>In the search results, you can view the visitor records including entry time, entry location, exit time, time of last access, and location of last access. You can also tap a search result to view its details, including visitor records, visitor information (name, photo, credential type, ID number, phone number, company, visit purpose, and passport picture.), and visatee information (name, ID number, phone number, company).</p>
Search by Search Results	Search captured pictures, records in archives, or identities by the search results.
Add to Person List	Add the person in the search results to a person list after searching matched picture or searching person's identity.
Add to Vehicle List	Add the vehicle in the search results to a vehicle list after searching passing vehicles.



## Features in the Video Analysis Module

 **Note**


The Video Analysis module is only available on tablet.

Feature	Description
Generate Heat Map Report	<p>A heat map is a graphical representation of data represented by colors. This function is usually used to analyze the visit times and dwell time of customers in a configured area.</p> <p> <b>Note</b> In the generated heat map, the red-colored area represents the most frequently visited area, and the blue-colored area represents the least visited area.</p>
Generate Vehicle Analysis Report	For ANPR cameras, you can generate a report to show the number of passing vehicles detected by the specified cameras during specified time period.
Generate Temperature Report	For thermal cameras, you can generate a report to show the number of exceptions (temperature too high or too low) on different presets.
Generate People Counting Report	People counting statistics is to calculate the number of line crossing people in a specific area and a certain time period by the people counting camera(s). You can generate report to view the people counting statistics in a line chart or histogram.
Generate Queue Analysis Report	For cameras which support queue management, you can generate a report to show the number of queue exceptions and number of persons in each queue, and show the queue status including waiting duration and queue length.
Generate Pathway Analysis Report	Pathway analysis is mainly used to analyze the people counting in the pathways in the shopping malls. With the help of the fisheye cameras, the system can collect the consumers data and translate the data into a dashboard for mall managers. The dashboard shows the most popular areas/shops in the mall and the least popular ones, which may help the mall managers develop strategies to improve the overall customer flow or overall sales.

## Features in Traffic Module

Feature	Description
Search Area	<p>Enter the area name to search the area.</p> <p> <b>Note</b> Support fuzzy match.</p>
Display the Number of People	<p>Display the real-time number of people stayed and remaining entries in different areas.</p>
Edit Displaying Content	<p>Edit the displaying contents, including headline and descriptions for normal and abnormal scenario.</p> <p> <b>Note</b></p> <ul style="list-style-type: none"><li>• The normal scenario indicates the number of people inside the area is below the upper limit.</li><li>• The abnormal scenario indicates the number of people inside the area exceeds the upper limit.</li></ul>

## Features in Person Module

Feature	Description
Upload Person Information	Set the required information such as ID, profile picture, last name, face comparison group, and effective period, and then upload the person information to the system.
Upload Visitor Information	<p>Set the required information such as ID type, identification number, ID picture, profile picture, last name, person group, license plate number, visit purpose, and effective period, and then upload the visitor information to the system.</p> <p> <b>Note</b></p> <p>If you set the access group, the visitor information will be automatically applied to the device.</p>

## Features in Health Monitoring Module



**Note**

This function module is only supported in the iOS version of the Mobile Client.

Feature	Description
View Camera Status	<p>View the total amount of cameras added to HikCentral Professional.</p> <p>View the amount of the abnormal cameras.</p> <p>View the list of abnormal cameras by clicking the abnormal camera number, and then view exception details of a specific camera by clicking it on the camera list.</p> <p>View the amount and list of the cameras under each abnormal status, including offline, video signal exception, recording exception, and arming status exception.</p> <p>View the detailed recording status.</p>
View Remote Site Status	<p>View the total amount of the remote sites added to the central site of HikCentral.</p> <p>View the amount of the remote sites which are offline and the detailed list of offline remote sites.</p>
View Door Status	<p>View the total amount of doors added to HikCentral Professional.</p> <p>View the amount of abnormal doors.</p> <p>View the list of abnormal doors</p> <p>View the network status of the access control device to which the door is linked.</p> <p>View the network status of the face recognition terminal linked to the door.</p> <p>View the status of the card reader linked to the door.</p> <p>View the details of the card reader information, including tampering status, card reader enabled or not, authentication mode, and network status.</p>
View UVSS Status	<p>View the total amount the Under Vehicle Screening Systems (UVSS) added to HikCentral Professional.</p> <p>View the amount of abnormal UVSSs.</p> <p>View the list of abnormal UVSSs.</p>





## HikCentral Professional Mobile Client Feature List

---


Feature	Description
	<p>View the network status of UVSS.</p> <p>View the status of the line scan camera.</p> <p>View the status of the capture camera.</p> <p>View the storage status.</p>
View Elevator Status	<p>View the total amount elevator controllers added to HikCentral Professional.</p> <p>View the amount of abnormal elevator controllers.</p> <p>View the list of abnormal elevator controllers.</p> <p>View the status of the card reader linked to the elevator controller.</p> <p>View the details of the card reader information, including tampering status, card reader enabled or not, authentication mode, and network status.</p>
View Service Status	<p>View the status of servers, including system management server, application data server, and application data standby server.</p>

## Features in the Local Configuration Module

Feature	Description
View Account Information	View the current user, server information, server address, as well as the account list, which displays the accounts of which the passwords are remembered when you logging in.
Add Account to Account List	Log in and enable the Mobile Client to remember account password so as to add account to the account list
Switch Account	Switch account by tapping the account in the account list.
Multimedia Management	View and manage the local video files and pictures that you manually record (clip) video files and capture pictures in the Live View Playback page. And export the pictures to the local album, or share the pictures and video files to other applications.
Set Device Access Mode	<p>Set the device access mode of the Mobile Client to Automatically Judge, Direct Connection, Proxy Mode or the same with the corresponding setting of the Web Client to define how the system accesses all the added encoding devices.</p> <p><b>Restore Default</b></p> <p>Set the device access mode of the client to the same with the corresponding setting of the Web Client.</p> <p><b>Automatically Judge:</b></p> <p>The Mobile Client will automatically judge the condition of network connection and then set the device access mode to <b>Direct Connection</b> or <b>Proxy Mode</b>. The latter is less effective and less efficient.</p> <p> <b>Note</b></p> <p>The default device access mode of the client is Automatically Judge.</p> <p><b>Direct Connection</b></p> <p>The Mobile Client will access the device directly.</p> <p> <b>Note</b></p> <p>The direct connection mode is not supported by the third-party encoding device.</p> <p><b>Proxy Mode:</b></p>


## HikCentral Professional Mobile Client Feature List

---

Feature	Description
	The Mobile Client will access the device via Streaming Gateway and Management Service, which is less effective and less efficient than <b>Direct Connection</b> .
Set Default Stream	<p>Set main stream or sub-stream as the default stream type for accessing the resources of all the encoding devices.</p> <p> <b>Note</b></p> <ul style="list-style-type: none"> <li>• The main stream is usually for live view with good bandwidth, and the sub-stream can be used for live view when the bandwidth is limited.</li> <li>• When viewing the live video of multiple channels, the stream type can only be sub-stream.</li> </ul>
Display Detection Frame on Video	Display detection frames (including motion detection frames, fire source information, temperature, etc.) on video.
Auto Refresh Thumbnail	Automatically refresh the thumbnails of the resources displayed on the Logical Resource page and Favorites page. The thumbnail is a picture automatically captured by the resource.
Enable Hardware Decoding	Hardware Decoding can provide better decoding performance and lower CPU usage when playing the HD videos during live view or playback.
Time Zone	<p>Set the time for the Mobile Client.</p> <p><b>Client Time</b></p> <p>Use the time of the time zone where the phone or tablet running the Mobile Client locates in for the time-related features of the Mobile Client.</p> <p><b>Device Time</b></p> <p>Use the time of the time zone where the device locates in for the time-related features of the Mobile Client.</p> <p>For example, if you select <b>Device Time</b>, when you start playback, video footage of the selected device(s) will be played back by the time where the device locates in.</p>
Show Time Difference	If enabled, the time zone information will be displayed on the time. For example, 2018-12-12 12:12:12 +8:00.
Enable Notification	Enable notification to allow the HikCentral system to push alarm information of the added resources to your Mobile Client.

## HikCentral Professional Mobile Client Feature List

---

Feature	Description
	<p> <b>Note</b></p> <ul style="list-style-type: none"> <li>• You should have set alarm notification as alarm linkage for the resources on the Web Client. For details, see <i>User Manual of HikCentral Web Client</i>.</li> <li>• You should have allowed the Mobile Client to push notifications to your phone or tablet. <ul style="list-style-type: none"> <li>• For iPhone, go to <b>Settings → Notifications</b> , tap the Mobile Client in the app list, and then set <b>Allow Notifications</b> to on.</li> <li>• For iPad, go to <b>Settings → Notifications</b> , tap the Mobile Client in the app list, and then set <b>Allow Notifications</b> to on.</li> <li>• For the phone using Android OS, take Huawei phone for an example, go to <b>Settings → Notification Center</b> , tap the Mobile Client in the app list, and then set <b>Allow Notifications</b> to on.</li> <li>• For the tablet using Android OS, take Huawei tablet for an example, go to <b>Settings → Notification Center</b> , tap the Mobile Client in the app list, and then set <b>Allow Notifications</b> to on.</li> </ul> </li> </ul>
View Traffic Statistics	View the mobile data usage on the Mobile Client.
About	View the Mobile Client information as well as details about Terms of Privacy, Open Source Software License, and End User License Agreement.
Update Version	Update the Mobile Client to its latest version on the About page if a new version is available.

